
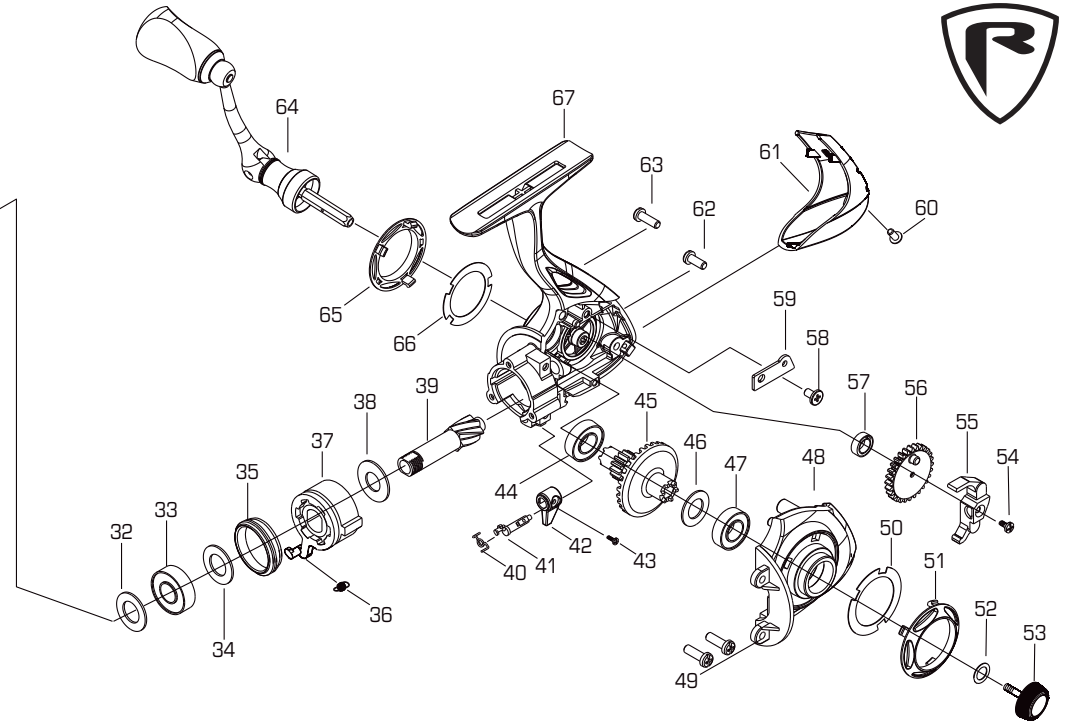


**FOX
RAGE**

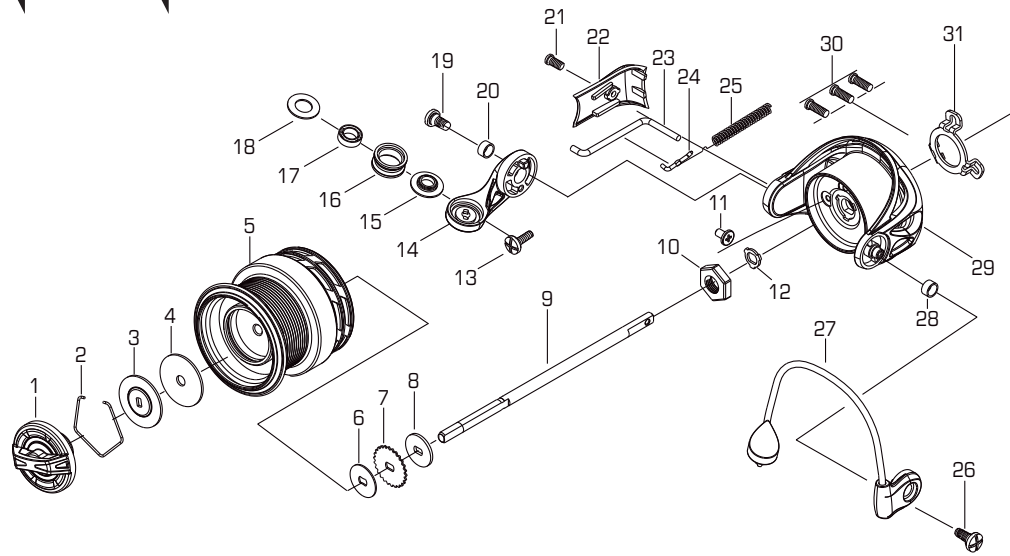

PRISM X 1000



No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	ROTATING METAL WASHER
4	DRAG WASHER
5	PRISM X 1000 SPOOL
6	SPOOL WASHER
7	CLICK RATCHET
8	MAIN SHAFT WASHER
9	MAIN SHAFT
10	ROTOR NUT
11	LOCKING ROTOR NUT SCREW
12	ROTOR WASHER
13	LINE ROLLER SCREW
14	LINE ROLLER BOSS
15	LINE ROLLER END PLATE
16	LINE ROLLER
17	LINE ROLLER BEARING

No	Parts Name
18	LINE ROLLER WASHER
19	BOSS SCREW
20	LINE ROLLER BOSS BUSH
21	SIDE COVER SCREW
22	ROTOR SIDE COVER
23	BAIL ARM PUSH ROD
24	LEVER
25	BAIL ARM SPRING
26	PIVOT SCREW
27	BAIL ARM ASSEMBLY
28	BAIL ARM BOSS BUSH
29	PRISM X 1000 ROTOR
30	BEARING PLATE SCREWS
31	BEARING PLATE
32	BEARING WASHER
33	MAIN SHAFT BEARING
34	BEARING WASHER

No	Parts Name
35	BEARING HOLDER
36	BEARING SPRING
37	ANTI REVERSE BEARING
38	PINION WASHER
39	PINION GEAR
40	ANTI REVERSE LEVER SPRING
41	ANTI REVERSE LINKAGE
42	ANTI REVERSE LEVER
43	LEVER SCREW
44	MAIN GEAR BEARING
45	MAIN GEAR
46	MAIN GEAR SHIM
47	MAIN GEAR BEARING
48	PRISM X 1000 SIDE COVER
49	SIDE COVER SCREWS
50	SIDE COVER PLATE
51	DECORATIVE SIDE COVER

No	Parts Name
52	HANDLE SCREW WASHER
53	HANDLE SCREW
54	BLOCK SCREW
55	OSCILLATION BLOCK
56	OSCILLATION GEAR
57	OSCILLATION GEAR BEARING
58	RETAINER PLATE SCREW
59	RETAINER PLATE
60	REAR COVER SCREW
61	REAR COVER
62	SIDE COVER SCREW
63	SIDE COVER SCREW
64	PRISM X 1000 HANDLE
65	DECORATIVE SIDE COVER
66	SIDE COVER PLATE
67	PRISM X 1000 BODY

**FOX
RAGE**

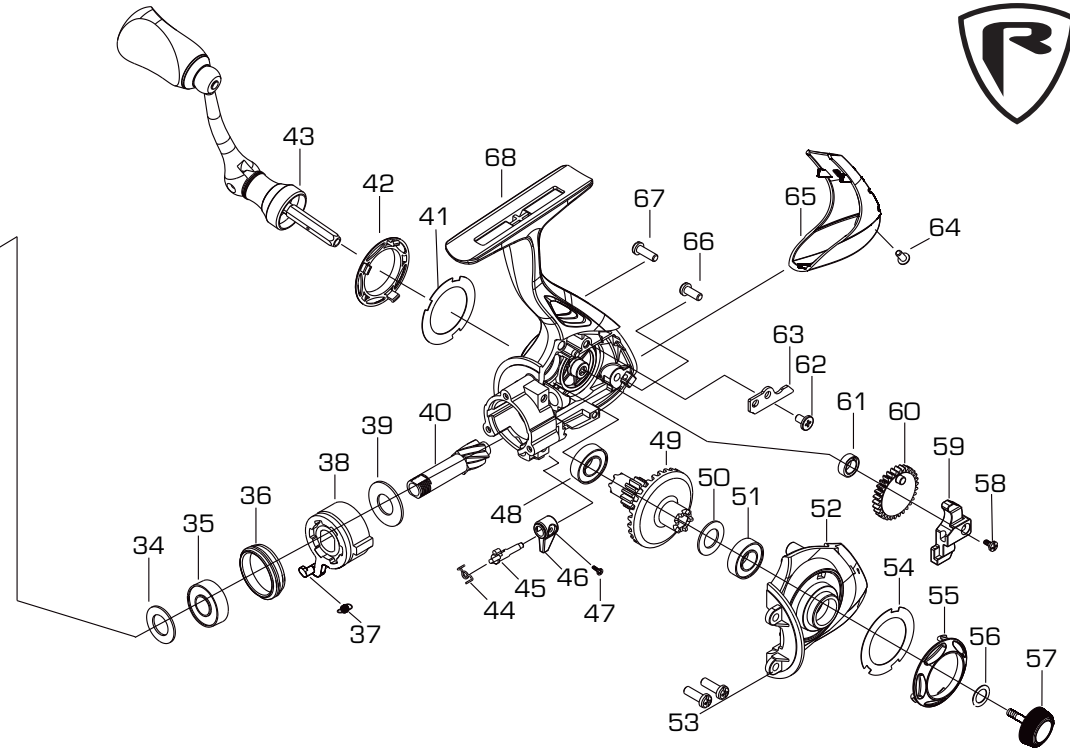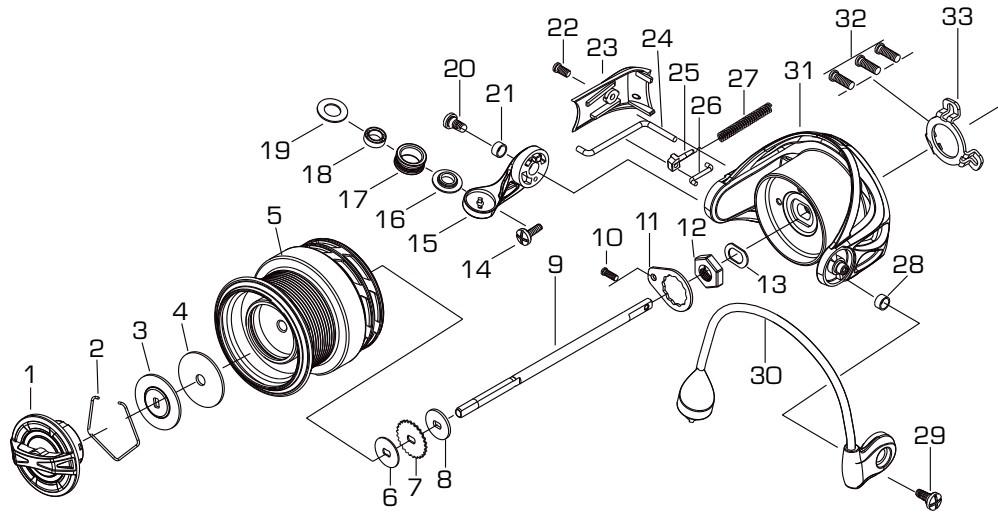

PRISM X 2500



No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	ROTATING METAL WASHER
4	DRAG WASHER
5	PRISM X 2500 SPOOL
6	SPOOL WASHER
7	CLICK RATCHET
8	MAIN SHAFT WASHER
9	MAIN SHAFT
10	LOCKING WASHER SCREW
11	LOCKING WASHER
12	ROTOR NUT
13	ROTOR WASHER
14	LINE ROLLER SCREW
15	LINE ROLLER BOSS
16	LINE ROLLER END PLATE
17	LINE ROLLER

No	Parts Name
18	LINE ROLLER BEARING
19	LINE ROLLER WASHER
20	BOSS SCREW
21	LINE ROLLER BOSS BUSH
22	SIDE COVER SCREW
23	ROTOR SIDE COVER
24	BAIL ARM PUSH ROD
25	BAIL ARM SPRING ACTUATOR
26	LEVER
27	BAIL ARM SPRING
28	BAIL ARM BOSS BUSH
29	PIVOT SCREW
30	BAIL ARM ASSEMBLY
31	PRISM X 2500 ROTOR
32	BEARING PLATE SCREWS
33	BEARING PLATE
34	BEARING WASHER

No	Parts Name
35	MAIN SHAFT BEARING
36	BEARING HOLDER
37	BEARING SPRING
38	ANTI REVERSE BEARING
39	PINION WASHER
40	PINION GEAR
41	SIDE COVER PLATE
42	DECORATIVE SIDE COVER
43	PRISM X 2500 HANDLE
44	ANTI REVERSE LEVER SPRING
45	ANTI REVERSE LINKAGE
46	ANTI REVERSE LEVER
47	LEVER SCREW
48	MAIN GEAR BEARING
49	MAIN GEAR
50	MAIN GEAR SHIM
51	MAIN GEAR BEARING

No	Parts Name
52	PRISM X 2500 SIDE COVER
53	SIDE COVER SCREWS
54	SIDE COVER PLATE
55	DECORATIVE SIDE COVER
56	HANDLE SCREW WASHER
57	HANDLE SCREW
58	BLOCK SCREW
59	OSCILLATION BLOCK
60	OSCILLATION GEAR
61	OSCILLATION GEAR BEARING
62	RETAINER PLATE SCREW
63	RETAINER PLATE
64	REAR COVER SCREW
65	REAR COVER
66	SIDE COVER SCREW
67	SIDE COVER SCREW
68	PRISM X 2500 BODY

**FOX
RAGE**

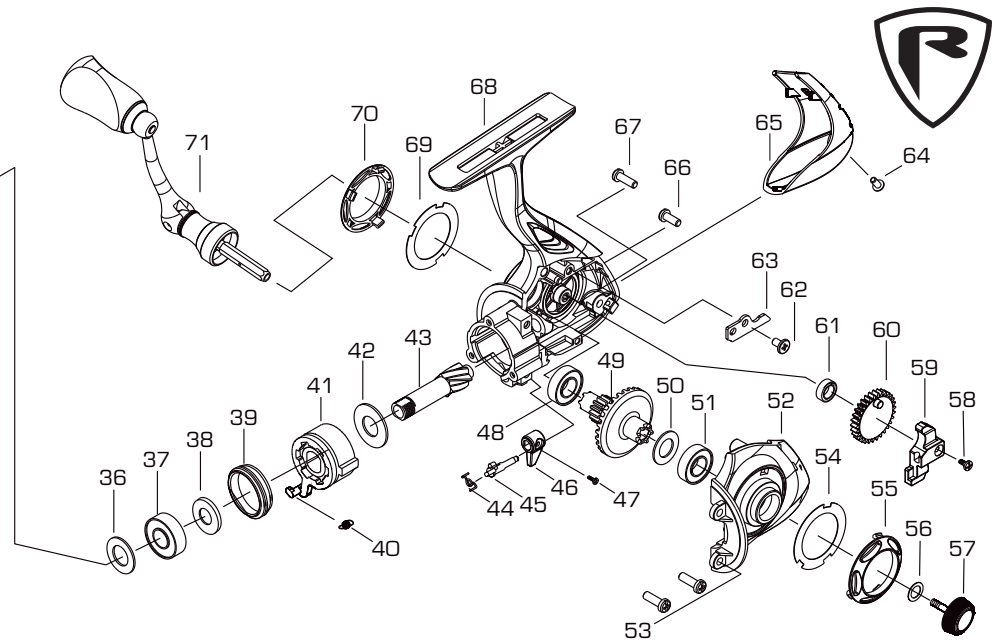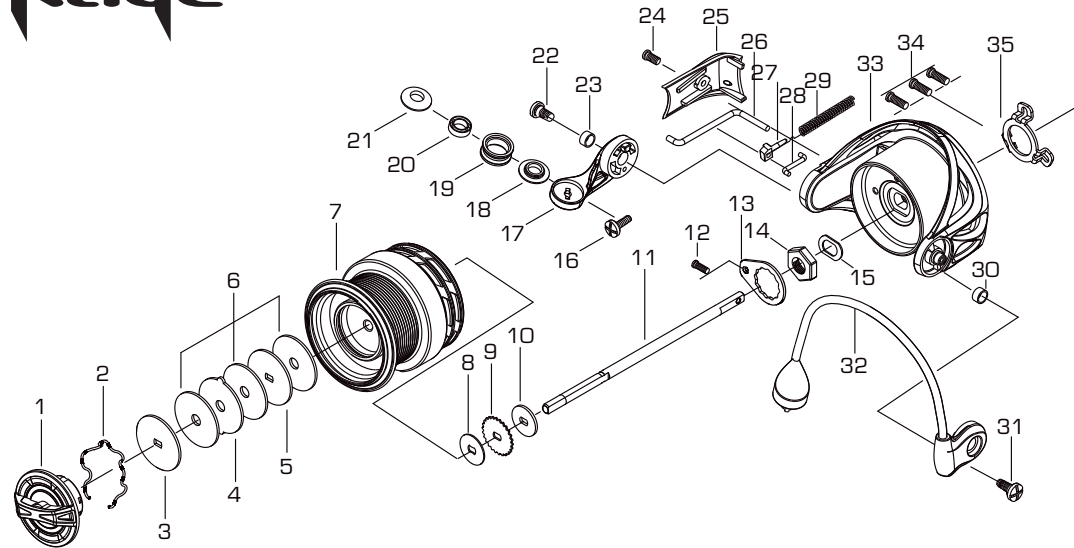

PRISM X 4500

No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	ROTATING METAL WASHER
4	FIXED METAL WASHER
5	ROTATING METAL WASHER
6	DRAG WASHERS
7	PRISM X 4500 SPOOL
8	SPOOL WASHER
9	CLICK RATCHET
10	MAIN SHAFT WASHER
11	MAIN SHAFT
12	LOCKING WASHER SCREW
13	LOCKING WASHER
14	ROTOR NUT
15	ROTOR WASHER
16	LINE ROLLER SCREW
17	LINE ROLLER BOSS
18	LINE ROLLER END PLATE

No	Parts Name
19	LINE ROLLER
20	LINE ROLLER BEARING
21	LINE ROLLER WASHER
22	BOSS SCREW
23	LINE ROLLER BOSS BUSH
24	SIDE COVER SCREW
25	ROTOR SIDE COVER
26	BAIL ARM PUSH ROD
27	BAIL ARM SPRING ACTUATOR
28	LEVER
29	BAIL ARM SPRING
30	BAIL ARM BOSS BUSH
31	PIVOT SCREW
32	BAIL ARM ASSEMBLY
33	PRISM X 4500 ROTOR
34	BEARING PLATE SCREWS
35	BEARING PLATE
36	BEARING WASHER

No	Parts Name
37	MAIN SHAFT BEARING
38	BEARING WASHER
39	BEARING HOLDER
40	BEARING SPRING
41	ANTI REVERSE BEARING
42	PINION WASHER
43	PINION GEAR
44	ANTI REVERSE LEVER SPRING
45	ANTI REVERSE LINKAGE
46	ANTI REVERSE LEVER
47	LEVER SCREW
48	MAIN GEAR BEARING
49	MAIN GEAR
50	MAIN GEAR SHIM
51	MAIN GEAR BEARING
52	PRISM X 4500 SIDE COVER
53	SIDE COVER SCREWS
54	SIDE COVER PLATE

No	Parts Name
55	DECORATIVE SIDE COVER
56	HANDLE SCREW WASHER
57	HANDLE SCREW
58	BLOCK SCREW
59	OSCILLATION BLOCK
60	OSCILLATION GEAR
61	OSCILLATION GEAR BEARING
62	RETAINER PLATE SCREW
63	RETAINER PLATE
64	REAR COVER SCREW
65	REAR COVER
66	SIDE COVER SCREW
67	SIDE COVER SCREW
68	PRISM X 4500 BODY
69	SIDE COVER PLATE
70	DECORATIVE SIDE COVER
71	PRISM X 4500 HANDLE