


**FOX  
RAGE**

**WARRIOR 1000**

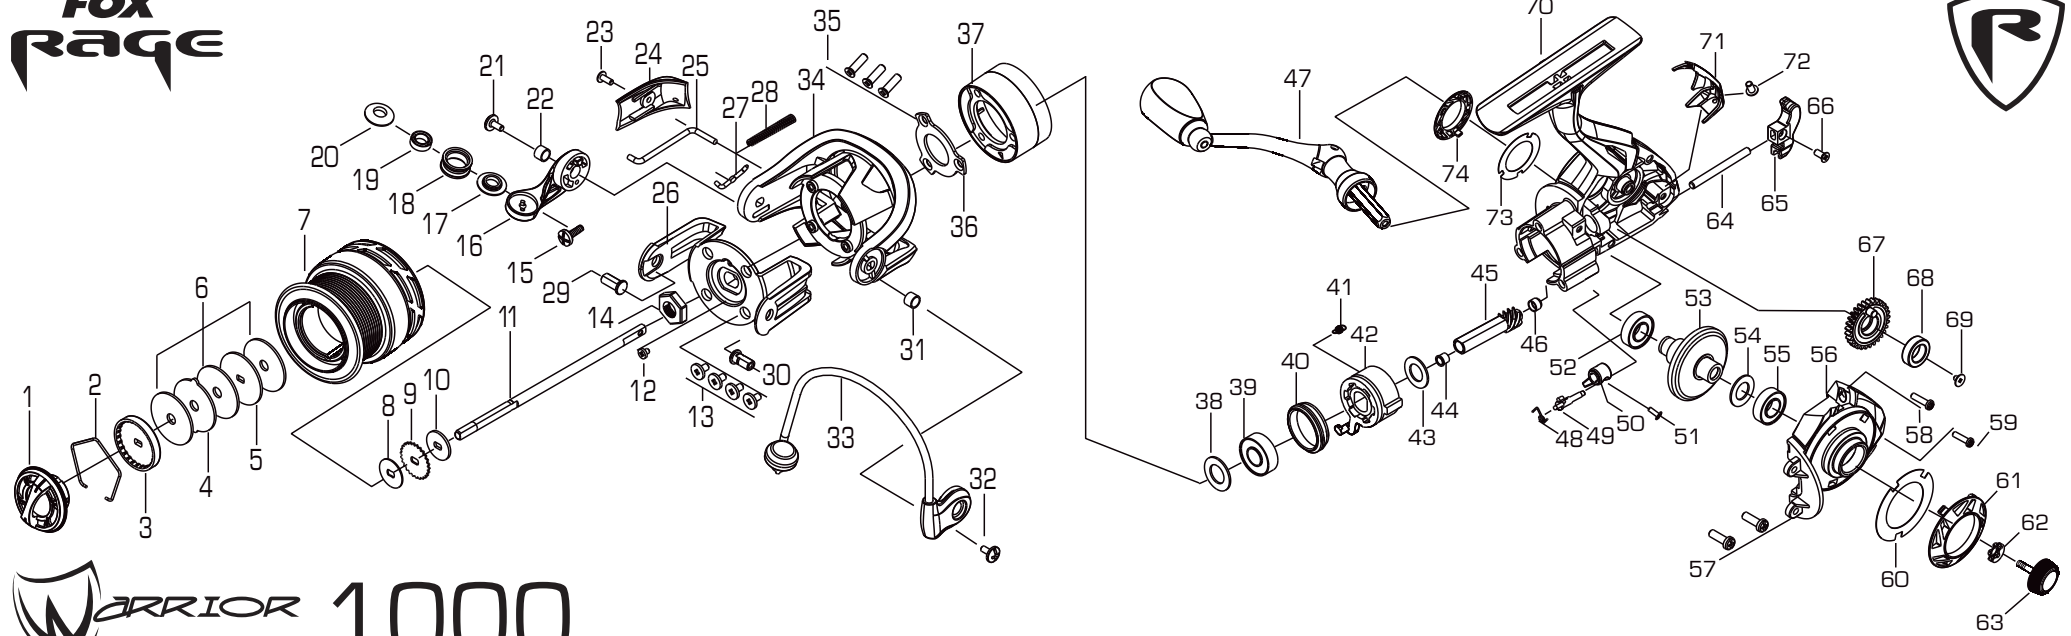


No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	DRAG CLICKER CAP
4	FIXED METAL WASHER
5	ROTATING METAL WASHER
6	DRAG WASHERS
7	WARRIOR 1000 SPOOL
8	SPOOL WASHER
9	CLICK RATCHET
10	MAIN SHAFT WASHER
11	MAIN SHAFT
12	LOCKING NUT SCREW
13	INNER ROTOR SCREWS
14	ROTOR NUT
15	LINE ROLLER SCREW
16	LINE ROLLER BOSS
17	LINE ROLLER END PLATE
18	LINE ROLLER
19	LINE ROLLER BEARING

No	Parts Name
20	LINE ROLLER WASHER
21	BOSS SCREW
22	LINE ROLLER BOSS BUSH
23	SIDE COVER SCREW
24	ROTOR SIDE COVER
25	BAIL ARM PUSH ROD
26	INNER ROTOR
27	LEVER
28	BAIL ARM SPRING
29	LINE ROLLER BOSS NUT
30	BAIL ARM BOSS NUT
31	BAIL ARM BOSS BUSH
32	PIVOT SCREW
33	BAIL ARM ASSEMBLY
34	WARRIOR 1000 ROTOR
35	BEARING PLATE SCREWS
36	BEARING PLATE
37	BEARING HOUSING
38	BEARING WASHER


No	Parts Name
39	MAIN SHAFT BEARING
40	BEARING HOLDER
41	BEARING SPRING
42	ANTI REVERSE BEARING
43	PINION WASHER
44	PINION BUSH
45	PINION GEAR
46	PINION BUSH
47	WARRIOR 1000 HANDLE
48	ANTI REVERSE LEVER SPRING
49	ANTI REVERSE LINKAGE
50	ANTI REVERSE LEVER
51	LEVER SCREW
52	MAIN GEAR BEARING
53	MAIN GEAR
54	MAIN GEAR SHIM
55	MAIN GEAR BEARING
56	WARRIOR 1000 SIDE COVER
57	SIDE COVER SCREWS

No	Parts Name
58	SIDE COVER SCREW
59	SIDE COVER SCREW
60	SIDE COVER PLATE
61	DECORATIVE SIDE COVER
62	HANDLE SCREW WASHER
63	HANDLE SCREW
64	OSCILLATION BLOCK RAIL
65	OSCILLATION BLOCK
66	OSCILLATION BLOCK SCREW
67	OSCILLATION GEAR
68	OSCILLATION GEAR BEARING
69	OSCILLATION GEAR SCREW
70	WARRIOR 1000 BODY
71	REAR COVER
72	REAR COVER SCREW
73	SIDE COVER PLATE
74	DECORATIVE SIDE COVER

**FOX  
RAGE**

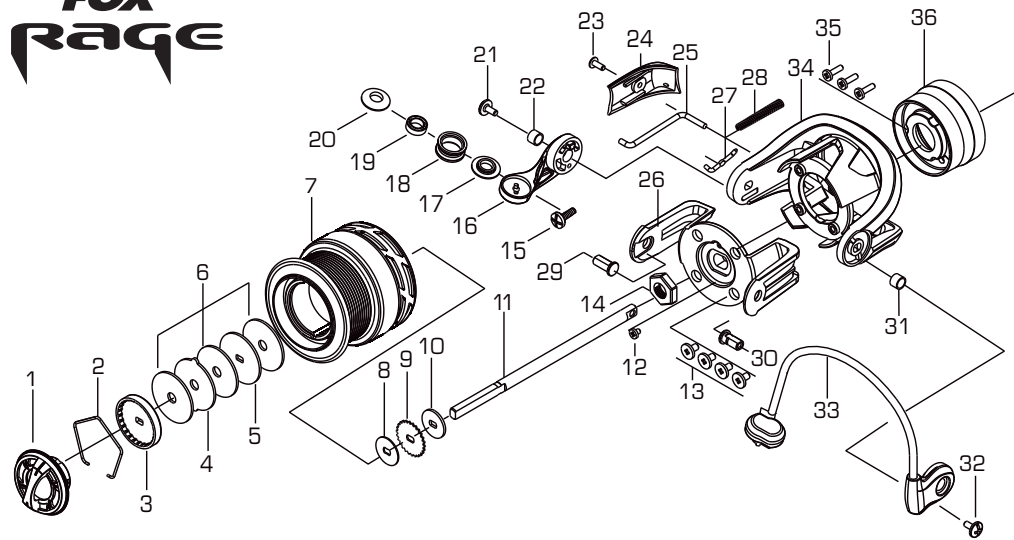

**WARRIOR 2500**

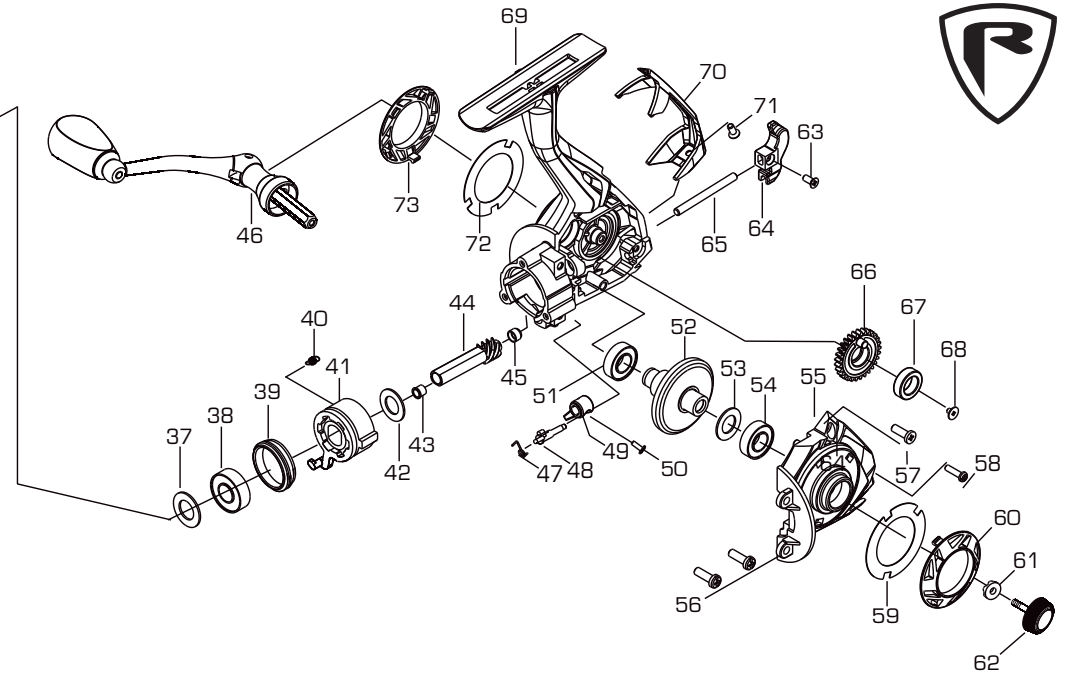


No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	DRAG CLICKER CAP
4	FIXED METAL WASHER
5	ROTATING METAL WASHER
6	DRAG WASHERS
7	WARRIOR 2500 SPOOL
8	SPOOL WASHER
9	CLICK RATCHET
10	MAIN SHAFT WASHER
11	MAIN SHAFT
12	LOCKING NUT SCREW
13	INNER ROTOR SCREWS
14	ROTOR NUT
15	LINE ROLLER SCREW
16	LINE ROLLER BOSS
17	LINE ROLLER END PLATE
18	LINE ROLLER
19	LINE ROLLER BEARING

No	Parts Name
20	LINE ROLLER WASHER
21	BOSS SCREW
22	LINE ROLLER BOSS BUSH
23	SIDE COVER SCREW
24	ROTOR SIDE COVER
25	BAIL ARM PUSH ROD
26	INNER ROTOR
27	LEVER
28	BAIL ARM SPRING
29	LINE ROLLER BOSS NUT
30	BAIL ARM BOSS NUT
31	BAIL ARM BOSS BUSH
32	PIVOT SCREW
33	BAIL ARM ASSEMBLY
34	WARRIOR 2500 ROTOR
35	BEARING HOUSING SCREWS
36	BEARING HOUSING
37	BEARING WASHER
38	MAIN SHAFT BEARING


No	Parts Name
39	BEARING HOLDER
40	BEARING SPRING
41	ANTI REVERSE BEARING
42	PINION WASHER
43	PINION BUSH
44	PINION GEAR
45	PINION BUSH
46	WARRIOR 2500 HANDLE
47	ANTI REVERSE LEVER SPRING
48	ANTI REVERSE LINKAGE
49	ANTI REVERSE LEVER
50	LEVER SCREW
51	MAIN GEAR BEARING
52	MAIN GEAR
53	MAIN GEAR SHIM
54	MAIN GEAR BEARING
55	WARRIOR 2500 SIDE COVER
56	SIDE COVER SCREWS
57	SIDE COVER SCREW

No	Parts Name
58	SIDE COVER SCREW
59	SIDE COVER PLATE
60	DECORATIVE SIDE COVER
61	HANDLE SCREW WASHER
62	HANDLE SCREW
63	OSCILLATION BLOCK SCREW
64	OSCILLATION BLOCK
65	OSCILLATION BLOCK RAIL
66	OSCILLATION GEAR
67	OSCILLATION GEAR BEARING
68	OSCILLATION GEAR SCREW
69	WARRIOR 2500 BODY
70	REAR COVER
71	REAR COVER SCREW
72	SIDE COVER PLATE
73	DECORATIVE SIDE COVER

**FOX  
RAGE**

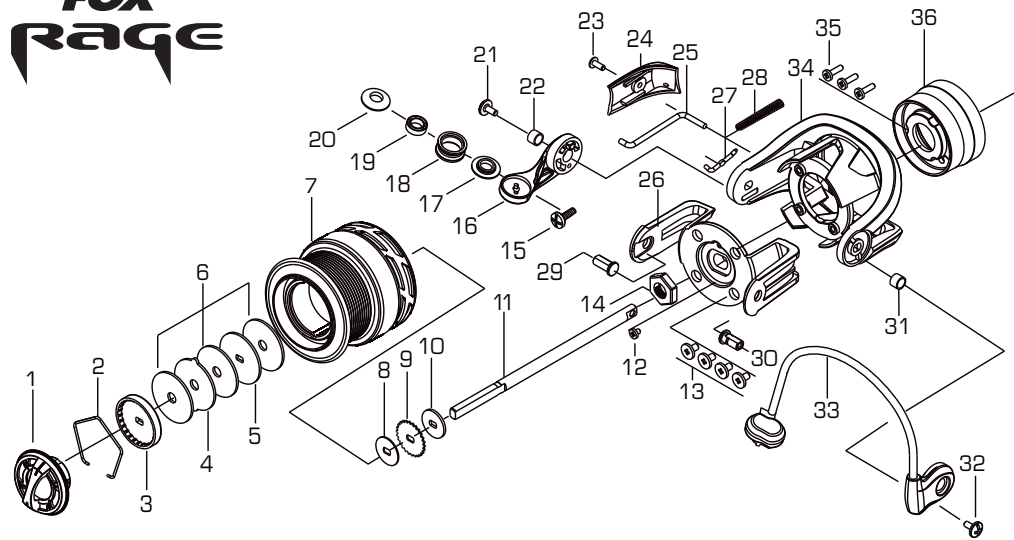

**WARRIOR 3500**

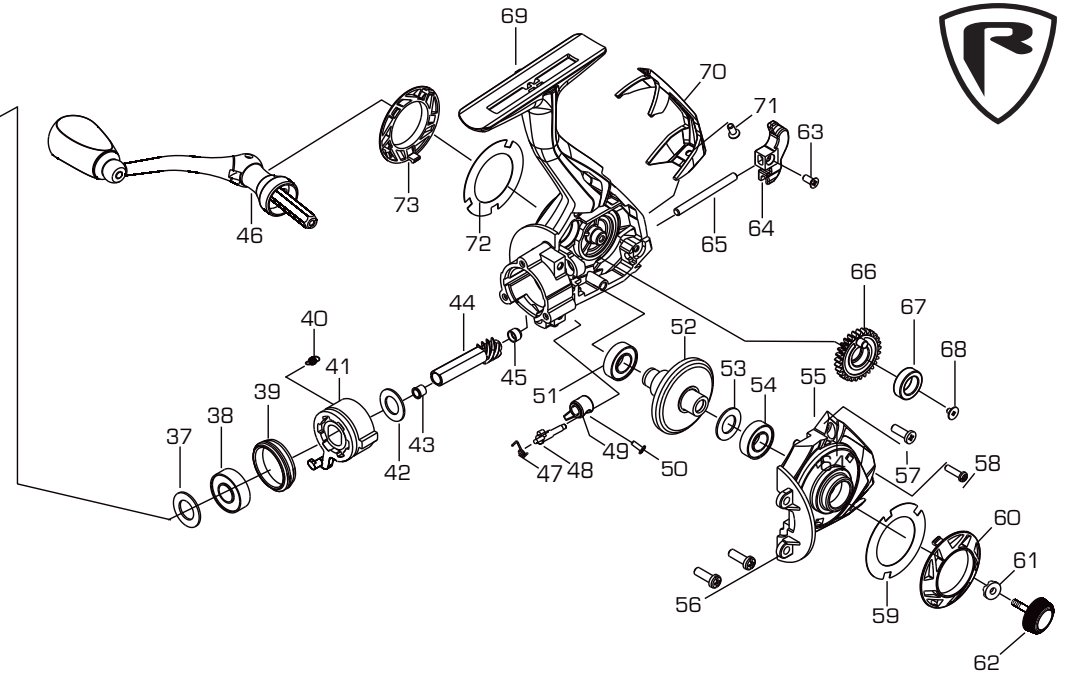

No	Parts Name
1	FRONT DRAG KNOB ASSEMBLY
2	DRAG RETAINER
3	DRAG CLICKER CAP
4	FIXED METAL WASHER
5	ROTATING METAL WASHER
6	DRAG WASHERS
7	WARRIOR 3500 SPOOL
8	SPOOL WASHER
9	CLICK RATCHET
10	MAIN SHAFT WASHER
11	MAIN SHAFT
12	LOCKING NUT SCREW
13	INNER ROTOR SCREWS
14	ROTOR NUT
15	LINE ROLLER SCREW
16	LINE ROLLER BOSS
17	LINE ROLLER END PLATE
18	LINE ROLLER
19	LINE ROLLER BEARING

No	Parts Name
20	LINE ROLLER WASHER
21	BOSS SCREW
22	LINE ROLLER BOSS BUSH
23	SIDE COVER SCREW
24	ROTOR SIDE COVER
25	BAIL ARM PUSH ROD
26	INNER ROTOR
27	LEVER
28	BAIL ARM SPRING
29	LINE ROLLER BOSS NUT
30	BAIL ARM BOSS NUT
31	BAIL ARM BOSS BUSH
32	PIVOT SCREW
33	BAIL ARM ASSEMBLY
34	WARRIOR 3500 ROTOR
35	BEARING HOUSING SCREWS
36	BEARING HOUSING
37	BEARING WASHER
38	MAIN SHAFT BEARING

No	Parts Name
39	BEARING HOLDER
40	BEARING SPRING
41	ANTI REVERSE BEARING
42	PINION WASHER
43	PINION BUSH
44	PINION GEAR
45	PINION BUSH
46	WARRIOR 3500 HANDLE
47	ANTI REVERSE LEVER SPRING
48	ANTI REVERSE LINKAGE
49	ANTI REVERSE LEVER
50	LEVER SCREW
51	MAIN GEAR BEARING
52	MAIN GEAR
53	MAIN GEAR SHIM
54	MAIN GEAR BEARING
55	WARRIOR 3500 SIDE COVER
56	SIDE COVER SCREWS
57	SIDE COVER SCREW

No	Parts Name
58	SIDE COVER SCREW
59	SIDE COVER PLATE
60	DECORATIVE SIDE COVER
61	HANDLE SCREW WASHER
62	HANDLE SCREW
63	OSCILLATION BLOCK SCREW
64	OSCILLATION BLOCK
65	OSCILLATION BLOCK RAIL
66	OSCILLATION GEAR
67	OSCILLATION GEAR BEARING
68	OSCILLATION GEAR SCREW
69	WARRIOR 3500 BODY
70	REAR COVER
71	REAR COVER SCREW
72	SIDE COVER PLATE
73	DECORATIVE SIDE COVER